


街廓原子一覽表用紙 (NO. 48-2BL)

略 図

計算面積 = 35.44.44
 窮切面積 = 35.44.44
 換地面積 = 35.44.44

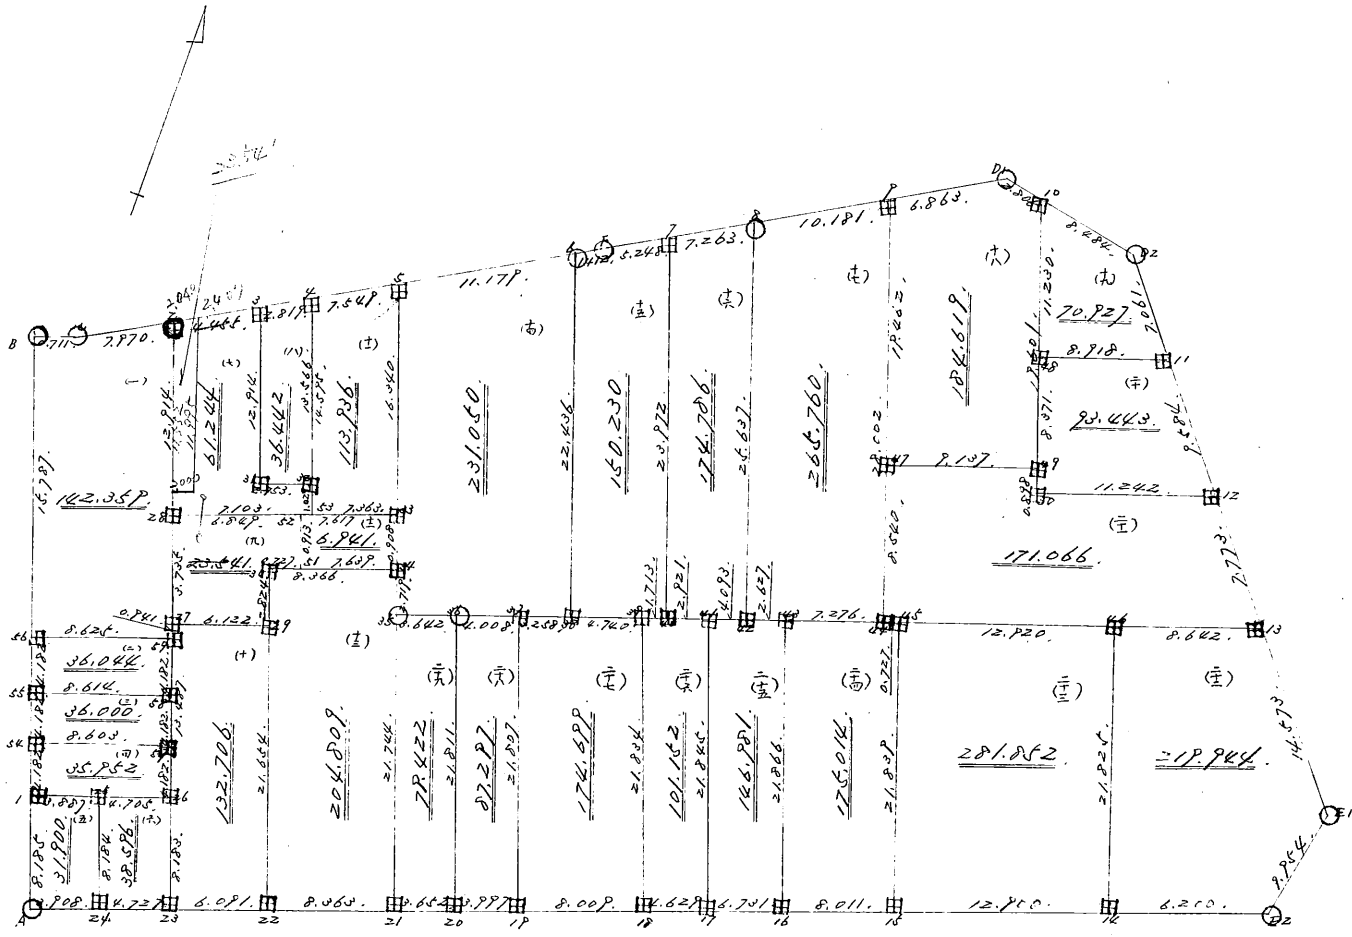

街角点座標及街区面積計算簿

街区番号 (No. 40-282)

点	方向角(A)			距離(S)	Cos A		sin A		X	Y	(3) 複緯距	(4) 複経距	(1) × (4)	(2) × (3)		
					(1) SCos A	(2) Ssin A										
A									3976.041	69741.909						
B	341	21	10	36.518	+ 34.601	- 11.676	3941.440	69753.525								
C	73	14	50	0.711	+ 0.205	+ 0.681	3941.235	69752.904								
E	58	9	40	35.384	+ 18.666	+ 30.060	3922.569	69722.844								
D1	57	59	0	29.555	+ 15.669	+ 25.060	3906.900	69697.784								
D2	102	41	0	11.290	- 24.779	+ 11.015	3909.379	69686.769								
E1	146	48	30	38.991	- 32.629	+ 21.346	3942.008	69665.423								
E2	199	23	50	9.954	- 9.389	- 3.306	3951.397	69668.729								
A	251	23	20	77.218	- 24.644	- 73.180	3976.041	69741.909								
点検点座標計算																
												Σ				
												倍面積				
												面積				3508.727

不二測量株式会社

町地名番

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積	
				+	-	+	-		+	-
56										
B		15707	341-24-10	14960			5142			
C		0711	72-14-50	0205		0621				
a		7970	58-9-40	4204		6771				
20		12914	160-39-52		12186	4276				
27		3735	141-20-30		3539	1195				
59		0941	161-29-50		0882	0289				
56		8625	251-20-31		2752	2174			142.059	
				19369	19369	13222	13222			

換地面積計算用紙 (不正形用)

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		經距		複經距	倍面積		町地名番
				+	-	+	-		+	-	
55											
56		4182	341-21-10	3962			1537				
59		2625	71-23-34	2752		2174					
58		4182	161-29-50		3962	1537					
57		2614	251-23-48		2742		2164			36,244	
				6714	6714	9501	9501				

不二測量株式会社

4D-2BL

町地名番

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積	
				+	-	+	-		+	-
54										
55		4102	341-21-10	3962			1337			
58		2614	71-23-48	2742		2164				
57		4102	141-29-50		3966	1337				
54		2603	251-26-3		2744		2154			36,000
				6710	6710	9491	9491			

換地面積計算用紙 (不正形用)

不二測量株式会社

48-2BL

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
1											
54		4.182	34-21-10	3.962			1.337				
57		3.683	71-24-3	2.744		2.154					
26		4.182	101-29-50		3.966	1.327					
25		4.705	251-24-40		1.500		4.460				
1		3.227	251-23-50		1.240		3.684			35,952	
				6.706	6.706	9.421	9.421				

不二測量株式会社

40-286

町地名番

角頂	夾角	辺長	方位角	緯距		經距		複經距	倍面積	
				+	-	+	-		+	-
A										
1		2185, 341-21-10		7755			2617			
24		3787, 71-23-50		1240		3784				
24		2184, 161-12-20			2740	2637				
A		3908, 251-23-20			1247		3704			31,900
					2895	2895	6321	6321		

換地面積計算用紙(不正形用)

不二測量株式会社

45-256

町地名番

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積	
				+	-	+	-		+	-
24										
25		2184, 341-12-20		7740			2637			
26		4705, 71-24-40		1500		4460				
27		2123, 161-3-10			7740	2657				
28		4727, 25-23-20			1500		4480			108,596
				9240	9240	7117	7117			

換地面積計算用紙 (不正形用)

不二測量株式会社

町地名番

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積	
				+	-	+	-		+	-
20										
2		12.914	340-39-52	12.126		4.276				
0		4.455	58-9-40	2.350		3.725				
01		12.914	160-39-52		12.126	4.276				
02		2.753	71-31-34	0.872		3.611				
03		1.229	160-39-52		1.271	0.341				
20		7.103	251-37-34		2.251	6.737				61.244
				15.402	15.402	11.013	11.013			
1										
2		11.552	360-39-52	10.900		3.825		3.825		41.692
P		2.049	58-9-40	1.080		1.960		5.910		6.382
1		11.995	160-39-52		11.318	3.992		0.198	2.240	
1		2.000	250-39-52		0.662	1.887		1.887		1.249
									2.240	49.323
				11.980		5.712				47.023
										23.541

換地面積計算用紙 (不正形用)

不二測量株式会社

町地名番

角頂	夾角	邊長	方位角	緯距		經距		複經距	倍面積	
				+	-	+	-		+	-
2/1										
2		12,914	310-39-52	12,126				4,276		
4		2,819	58-9-40	1,427		2,385				
22		13,566	160-39-53		12,801	4,492				
2/1		2,753	251-31-34		1,272		2,611			36,442
				13,673	13,673	4,227	4,227			

換地面積計算用紙(不正形用)

不二測量株式会社

4D-2BL

町地名番

九

角頂	夾角	辺長	方位角	緯距		經距		複經距	倍面積	
				+	-	+	-		+	-
27										
28		3,735	341-20-30	3,539			1,195			
52		6,249	71-31-34	2,171		6,496				
51		2,913	161-12-28		2,264	2,294				
20		2,727	251-29-20		2,231		2,629			
29		2,824	161-23-30		2,676	2,901				
27		6,122	251-32-10		1,939		5,207			25,541
				5,710	5,710	7,691	7,691			

換地面積計算用紙 (不正形用)

不二測量株式会社

4D-286



換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
20											
26		2120	341-3-10	7740		2657					
27		13407	341-29-50	12780		4280					
29		6122	71-22-10	1939		5207					
22		21654	161-24-50		20525	6902					
23		6091	251-23-20		1944	5772				132.706	
				22469	22469	12709	12709				

+

不二測量株式会社

町地名番

倍面積

+

-

複經距

經距

+

-

緯距

+

-

方位角

辺長

夹角

角頂

角頂	夹角	辺長	方位角	緯距		經距		複經距	倍面積		町地名番
				+	-	+	-		+	-	
53											
4		14.595	340-39-52	13.773		4.833					
5		7.549	57-9-40	3.982		6.413					
33		16.310	160-41-17		15.421	5.401					
53		7.363	251-31-34		2.333	6.984				113.936	
				17.754	17.754	11.817	11.817				

換地面積計算用紙(不正形用)

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
51											
52		0.913, 341-12-20		0.866		0.394					
33		7.617, 71-31-34		2.413		7.225					
34		0.908, 159-49-10		0.852		0.313					
51		7.639, 251-29-20		2.425		7.244				6.941	
				3.277	3.277	7.538	7.538				

不二測量株式会社

40-2B6

十三

角頂	夾角	辺長	方位角	緯距		經距		複經距	倍面積		町地名番
				+	-	+	-		+	-	
22											
29		21.654, 341-24-50		20.525			6902				
30		2.224, 341-23-30		2.476			0.901				
34		8.366, 71-39-20		2.456		7923					
35		2.719, 161-11-10			2.574	0.227					
21		21.744, 161-26-00			20.614	6919					
22		8.063, 251-23-20			2.669	7926				204.809	
				25257	25257	15729	15729				

換地面積計算用紙 (不正形用)

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
05											
04		2719	341-11-10	2574			0877				
03		0908	339-49-40	0852			0313				
02		16340	310-41-17	15421			5404				
01		11179	58-9-40	5898		9496					
00		22436	160-43-22		21178	7407					
07		3250	250-55-10		1065		3079				
06		4008	251-26-20		1276		3800				
05		0642	250-19-50		1228		3430			231,050	
				24745	24745	16903	16903				

不二測量株式会社

4D-2B2

十五

角頂	夾角	辺長	方位角	緯距		經距		複經距	倍面積		町地名番
				+	-	+	-		+	-	
4D											
6		22436, 340-45-22	21170			7407					
7		1412, 57-9-00	0745			1200					
7		5200, 57-59-0	2782			4450					
40		23970, 160-49-47			22643	7872					
49		1710, 251-18-40			0549	1623					
4D		4740, 251-23-10			1510	4492				150.230	
					2470	2470	13522	13522			

換地面積計算用紙 (不正形用)

不二測量株式会社

48-286

十六

町地名番

角頂	夾角	辺長	方位角		緯距		經距		復經距	倍面積	
			°	'	+	-	+	-		+	-
40											
7		23972	340-49-47		22643			7872			
8		7263	57-59-0		3850			6158			
42		25637	160-58-40			24237		8356			
41		4093	254-14-50			1316		3876			
40		2921	254-13-50			0940		2766			174.786
					26493	26493	14514	14514			

換地面積計算用紙 (不正形用)

不二測量株式会社

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
42											
8		25.637, 340-58-40,		24.237,				2.256,			
9		10.171, 57-59-0,		5.399,				2.639,			
44		28.002, 161-0-59,				26.479,		9.109,			
43		7.276, 251-30-20,				2.507,		6.900,			
42		2.627, 251-8-40,				2.249,		2.425,			265.760,
				29.636,	29.636,	17.742,	17.742,				

換地面積計算用紙(不正形用)

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
47											
9		19.462	341-0-59	18.403			6.331				
01		6.263	57-59-0	3.638		5.819					
10		2.806	102-41-0		0.616	2.738					
48		11.230	160-50-10		10.608	3.607					
49		8.371	160-50-10		7.907	2.748					
47		9.137	251-25-42		8.910		8.661			184.619	
				22.041	22.041	14.992	14.992				

不二測量株式会社

40-202

町地名番

十九

角頂	夾角	邊長	方位角	緯距		經距		複經距	倍面積	
				+	-	+	-		+	-
40										
10		11230	340-50-10	10608			3627			
02		8424	102-41-0		1863	2277				
11		7061	146-48-30		4909	3265				
40		2918	251-27-30		2826	2155				70,927
				10608	10608	12142	12142			

換地面積計算用紙 (不正形用)

不二測量株式会社

40-2BL

二
十

町地名番

角頂	夾角	辺長	方位角	緯距		經距		複經距	倍面積	
				+	-	+	-		+	-
50										
49		0.898 340-54-0		0.849		0.294				
40		2.371 340-50-10		2.907		2.768				
11		2.918 71-27-30		2.826		2.455				
12		9.528 146-40-30			8.920	5.247				
50		11.242 251-28-30			3.572	10.660				93.443
				11.592	11.592	13.702	13.702			

換地面積計算用紙 (不正形用)

不二測量株式会社

40-206

二
十一

角頂	夾角	辺長	方位角	緯距		經距		複經距	倍面積		町地名番
				+	-	+	-		+	-	
44											
47		2.540, 34-0-59,		2.076,			2.778,				
49		9.157, 71-25-42,		2.910,		2.661,					
50		0.298, 160-54-0,			0.249,	0.294,					
12		11.242, 71-28-30,		2.572,		1.0660,					
13		7.723, 146-48-30,			4.505,	4.255,					
46		2.642, 250-34-50,			2.278,		2.150,				
45		12.920, 251-27-0,			4.110,		12.249,				
44		0.727, 252-18-40,			0.221,		0.693,			1.71.066,	
				14.558,	14.558,	23.270,	23.270,				

換地面積計算用紙 (不正形用)

不二測量株式会社

48-206

二十一

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
14											
46		21.825, 34-26-20,		20.690,				6.947,			
10		8.642, 70-34-50,		2.873,		8.150,					
E1		14.573, 146-48-30,			12.185,	7.979,					
E2		9.954, 99-23-50,			9.329,			3.306,			
14		6.200, 25-23-20,			1.979,			5.876,			219.944
				23.563	23.563	14.129	14.129				

換地面積計算用紙 (不正形用)

不二測量株式会社

町地名番

二十三

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積	
				+	-	+	-		+	-
15										
45		21.879	341-23-10	20.697			6971			
46		12.900	71-27-0	4.110		12.349				
14		21.825	161-26-20		20.690	6947				
15		12.900	251-28-20		4.117		12.325			281.252
				24.807	24.807	19.196	19.196			

換地面積計算用紙 (不正形用)

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
13											
43		21866, 344-24-20,	20725			6972					
44		7276, 71-30-20,	2,307			6900					
45		0727, 72-12-48,	0,221			0693					
15		21839, 161-23-10,		20697		6971					
16		2011, 251-23-20,		2,557		7592				175,014	
				23254	23254	14564	14564				

不二測量株式会社

町地名番

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積	
				+	-	+	-		+	-
17										
41		21845, 341-26-0,		20702,			6954,			
42		4093, 71-14-50,		1216,		3276,				
43		2627, 71-8-40,		8249,		2426,				
16		21866, 161-24-20,			20725,	6972,				
17		6731, 251-23-20,			2148,		6379,			146.981
				22273,	22273,	19334,	19334,			

換地面積計算用紙 (不正形用)

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
18											
39		21.234, 34-25-10,		20.696,				6.957,			
40		1.712, 71-18-10,		0.529,		1.623,					
41		2.921, 71-13-50,		0.940,		2.766,					
17		21.816, 161-26-0,			20.702,		6.955,				
10		4.629, 251-23-20,			1.477,		4.327,			101.152,	
				22.125,	22.125,	11.344,	11.344,				

不二測量株式会社

20-2BL

二七

角頂	夾角	辺長	方位角	緯距		經距		複經距	倍面積		町地名番
				+	-	+	-		+	-	
19											
27		21,807	341-27-0	29,674			6,930				
30		3,250	70-55-10	1,965		3,979					
39		4,710	71-23-10	1,513		4,492					
10		21,834	61-25-10		24,696	6,957					
19		2,009	251-23-20		2,556	7,590				174,699	
				20,252	20,252	14,530	14,530				

換地面積計算用紙 (不正形用)

不二測量株式会社

換地面积計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		經距		複經距	倍面積		町地名番
				+	-	+	-		+	-	
20											
06		21.311	344-25-10	20.674			6.950				
07		11.008	71-26-20	1.276		3.200					
19		21.207	161-27-0	20.674		6.932					
20		3.997	251-23-20		1.276		3.722				87.297
				21.950	21.950	10.732	10.732				

不二測量株式会社

町地名番

角頂	夾角	辺長	方位角	緯距		經距		複經距	倍面積	
				+	-	+	-		+	-
21										
05		21.744, 341-26-40		20.614			6.919			
06		3.642, 70-19-50		1.224		3.430				
20		21.811, 141-25-10		20.674		6.950				
21		3.652, 251-23-20			1.166		3.465			79,422
				21.840	21.840	10.320	10.320			

換地面積計算用紙 (不正形用)

不二測量株式会社