


略 図

計算面積 = m²
 角切面積 =
 換地面積 =

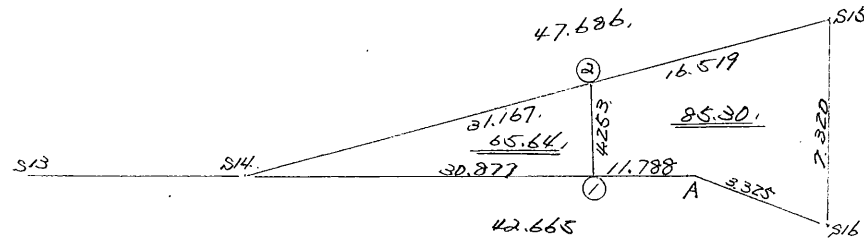

換地
面積
計算
用紙

(不正形用)

不二
測量
株式
会社

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
(1)											
(S14)		30.877	261-36-26	-4.507	0	-30.546	0	-30.546		137.6708	
(2)		31.167	73-45-59	8.713	1	29.924	1	-31.167		-271.5892	
(1)		4.253	171-36-26	-4.207	0	0.621	0	-0.621		2.6125	
								BAIMENSEKI		-131.3059	
								MENSEKI		65.65	
										-0.21	
										65.64	
(A)											
(1)		11.788	261-36-26	-1.721	0	-11.662	0	-11.662		20.0703	
(2)		4.253	351-36-26	4.207	0	-0.621	0	-23.945		-100.7366	
(S15)		16.519	73-45-59	4.618	0	15.860	0	-8.706		-40.2043	
(S16)		7.320	182- 1-42	-7.315	0	-0.259	0	6.895		-50.4369	
(A)		3.325	273-38-19	0.211	0	-3.318	0	3.318		0.7000	
								BAIMENSEKI		-170.6075	
								MENSEKI		85.30	