


街廓原子一覽表用紙 (1/6) 2/BL

坪

計算面積 = ~~24.28~~ / 1.44
 角切面積 = ~~1.44~~ / 1.44
 換地面積 = ~~1.44~~ / 1.44

図

略

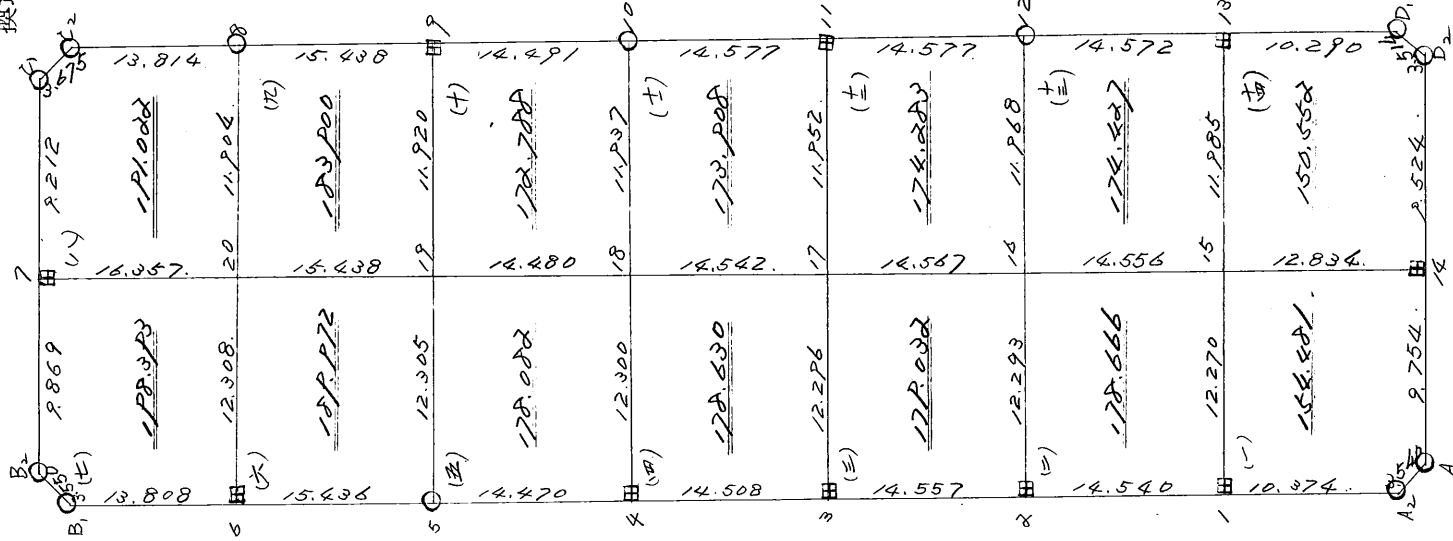

街角点座標及街区面積計算簿

街区番号 (No. 2136)

点	方向角(A)	距離(S)	cos A	sin A	x	y	(3) 複緯距	(4) 複経距	(1) × (4)	(2) × (3)
			(1) S cos A	(2) S sin A						
A1					5727.241	5308.964				
A2	17 28	3,540	0.1341	1.626	5724.707	5310.610				
B	17 6 54	24,914	23.8111	7.332	5700.296	5303.278				
B1	17 11 23	22,779	19.5281	21.509	5631.368	5281.769				
B2	10 41 1	3,550	1.738	3.096	5629.630	5278.674				
C1	107 10 7	19,021	5.1675	18.218	5635.305	5260.256				
C2	150 27 22	3,675	3.197	1.812	5638.502	5258.844				
D1	107 2 02	27,259	23.216	28.214	5731.918	5287.258				
D2	241 54 13	3,514	1.655	3.100	5733.573	5290.558				
E1	207 17 52	19,278	5.1732	18.406						
点検点座標計算								Σ		
								倍面積 面積		2478.41

不二測量株式会社

換地面积計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	()										
A1											
A2		0.1540	17 20	0.124			1.646				
1		10.274	17 6 54	9.914		0.250					
15		12.270	107 29 10		0.609	11.702					
14		12.224	127 12 14		12.260		0.796				
A1		2.754	207 17 12	2.700			0.313				
				15.049	15.049	14.704	14.704			154.621	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(7)										
1											
2		14.540	17 6 54	13.970		8.270					
16		12.270	107 25 10		0.600	11.700					
15		14.540	17 12 23		13.905	8.205					
1		12.270	247 29 50	0.600		11.700					
				17.540	17.540	16.000	16.000			170.666	

不二測量株式会社

換地面积計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(三)										
2											
0		18.557	17 11 20	10.007		4.003					
17		12.246	107 22 02		0.572	11.705					
16		18.557	107 12 21		10.415		4.009				
2		12.246	207 25 10	0.000			11.709				
				17.527	17.527	16.000	16.000			179.000	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(17)										
0											
4		14.500	17 11 20	10.060		4.207					
12		12.000	107 12 50		0.540	11.740					
17		14.500	127 12 10		10.200	4.200					
0		12.000	207 02 00	0.570		11.700					
				17.500	17.500	10.000	10.000			170.000	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(五)										
4											
5		12.470	17 11 20	10.000		4.270					
1P		10.000	107 10 2		0.600	11.757					
10		12.400	107 12 01		10.000	4.200					
4		10.000	107 12 40	0.540		11.740					
				17.464	17.464	10.000	10.000			170.000	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(2)										
5											
6		15.400	17 11 20	14.746		4.560					
20		12.400	107 9 01		0.621	11.760					
19		15.400	107 10 10		14.747		4.566				
5		12.400	207 10 2	0.622			11.747				
				14.740	14.070	16.020	16.020			10.9.972	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(F)										
6											
B1		10.207	17 11 20	13.591		4.020					
B2		0.450	60 41 11	1.700		0.025					
7		9.269	107 10 7		2.205	9.420					
20		16.057	107 12 15		15.625	4.220					
6		12.000	207 00 00	0.501		11.760					
				10.560	10.560	16.560	16.560			192.270	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(18)										
20											
7		10.057	17 12 15	15.625		4.208					
C1		10.212	107 18 7		2.766	2.775					
C2		0.575	100 27 22		0.157	1.210					
8		10.814	107 8 02		10.200	4.971					
20		11.704	287 9 04	0.512		11.074					
				19.107	19.107	15.445	15.445			171.000	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	面積		町地名番
				+	-	+	-		+	-	
	(丸)										
1P											
20		15.400	17 12 13	14.747		4.566					
8		11.904	107 9 00		0.500	11.074					
P		15.400	157 0 00		14.700		4.551				
1P		11.904	227 9 00	0.510			11.080				
				10.265	10.265	15.900	15.900			100.900	

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(+)										
10											
10		12.200	17 12 01	10.200		2.200					
10		11.200	107 0 56		0.510	11.200					
10		12.200	107 0 56		10.200		2.200				
10		11.200	207 12 50	0.510			11.200				
				17.200	17.200	15.200	15.200			172.700	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	面積		町地名番
				+	-	+	-		+	-	
	(±)		° ' "								
17											
18		14.562	17 12 10	14.072		4.001					
10		11.937	107 12 58		0.548	11.402					
11		18.577	197 2 42		12.989	4.096					
17		11.962	227 22 52	0.570		11.407					
				17.462	17.462	15.700	15.700			170.908	

不二測量株式会社

換地面积計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(土)										
16											
17		14.557	17 12 21	10.915		8.009					
11		11.962	107 22 42		0.570	11.207					
12		14.537	197 0 02		13.989	8.027					
16		11.962	207 25 00	0.504		11.419					
					17.479	17.479	15.710	15.710		174.200	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		復経距	倍面積		町地名番
				+	-	+	-		+	-	
	(15)										
15											
16		14.554	17 12 20	10.905		4.094					
12		11.960	107 25 00		0.504	11.419					
13		10.572	117 0 00		10.925	4.025					
15		11.925	287 00 00	0.504		11.419					
				17.509	17.509	15.725	15.725			176.427	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(亩)		° ' "								
14											
15		12.000	17 12 14	12.260		0.796					
10		11.925	107 00 2			0.500	11.430				
D1		10.280	127 8 00			0.230		0.000			
D2		0.570	221 54 10			1.555		0.100			
14		0.000	207 17 52	0.000			0.000				
				15.082	15.982	15.000	15.000			100.500	

不二測量株式会社