


街 廓 原 子 一 覽 表 用 紙 (No. 2387)

坪

計算面積 = 2923.49
 角地面積 = 2923.49
 換地面積 = 2923.49

図

略

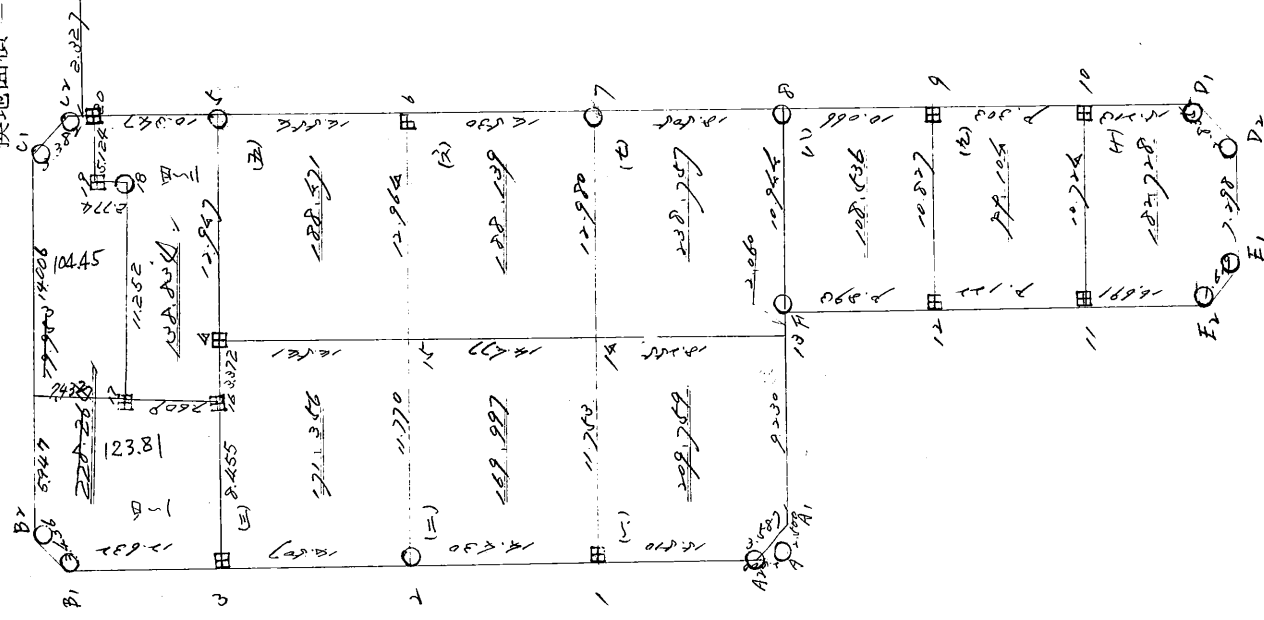

街角点座標及街区面積計算簿

街区番号 (No. 2386)

点	方向角(A)	距離(S)	Cos A		sin A		x	y	(3) 複緯距	(4) 複經距	(1) × (4)	(2) × (3)
			(1) S Cos A	(2) S sin A								
A1							4786.013	1358.059				
A2	022 18 18	2,587	2.196	1.620	5782.018	5359.689						
Y	17 10 58	29,960	28.606	5.885	5756.214	1350.866						
B1	17 2 10	27,129	25.928	7.195	5728.266	1342.894						
B2	62 27 1	2,436	1.189	2.066	5726.677	1339.267						
C1	107 18 58	19,960	1.939	19.069	5732.616	5320.798						
C2	151 36 31	2,382	2.175	1.608	5736.591	5019.190						
D1	197 11 53	24,845	20.606	20.039	5826.197	5247.229						
D2	260 12 32	2,005	1.278	2.153	5827.675	5349.760						
E1	287 18 58	7,298	2.162	6.197	5826.310	5356.730						
E2	331 28 33	1,619	1.622	0.775	5823.891	5357.565						
点検点座標計算										Σ		
										倍面積		
										面積		

不二測量株式会社

街角点座標及街区面積計算簿

街区番号 (No. 2352)

点	方向角(A)	距離(S)	cos A	sin A	x	y	(3) 複緯距	(4) 複經距	(1) × (4)	(2) × (3)
			(1) S cos A	(2) S sin A						
P	16 29 17	38.706	34.238	10.134	1729.650	637.371				
P'	280 48 29	11.290	10.688							
点検点座標計算								Σ		
								倍面積		
								面積		4923.294

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	0										
A1											
A2		0.507	1032	60	14	0.195		1.630			
1		15.510	17	10	60	14.810		4.482			
14		11.750	107	26	62		0.446	11.204			
10		18.265	147	15	31		7.633	5.616			
A1		9.230	288	60	29	2.276		27.730			
						20.289	20.409	14.786	14.786		
										209.759	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(±)										
1											
2		14.439	17 10 58	10.786		4.260					
15		11.770	107 22 50		0.516	11.233					
18		10.477	197 15 12		13.816		6.794				
1		11.750	287 36 42	0.586			11.202				
					17.362	17.362	15.596	15.596			
										169.997	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(E.)										
1											
2		14.507	17 2 10	13.070		4.250					
3		11.227	107 12 50		0.500	11.297					
4		14.541	117 15 31		13.226		4.314				
5		11.770	207 22 50	0.516			11.233				
				7.280	7.280	15.647	15.647				
										271.266	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(45°)		" "								
0											
B1		12.602	17 2 10	12.478		0.701					
B2		0.400	62 27 1	1.038		0.066					
C1		19.260	107 18 58		5.100	19.038					
C2		0.002	151 05 01		2.078	1.608					
Z0		2.027	197 11 40		2.220	0.600					
19		5.124	208 10 58	1.600		4.867					
18		2.774	197 6 02		2.651	0.016					
17		11.252	207 0 17	0.000		10.757					
16		7.609	196 48 05		7.200	2.200					
0		2.455	187 10 50	2.402		2.076					
				21.072	21.072	27.404	27.404			228.260	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(四)										
16											
17		2.509	16 48 05	2.214		2.200					
18		11.252	107 0 17		0.000	10.257					
19		2.224	17 5 02	2.251		0.214					
20		5.124	108 10 20		1.500	4.567					
5		10.057	19 11 40		0.000	0.000					
4		12.067	20 19 20	0.000		12.060					
16		0.072	20 12 50	0.000		0.221					
				10.000	10.000	10.000	10.000				

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(2)										
15											
4		12.551	17 15 31	13.286		4.314					
5		12.967	107 18 20		13.266	12.366					
6		12.551	107 11 43		13.906	4.302					
15		12.967	207 22 57	13.273		12.372					
				17.749	17.749	16.676	16.676				
										108.471	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(2)										
14											
15		14.577	17 15 12	13.226		6.294					
6		12.966	107 22 57		3.273	12.372					
7		12.830	197 11 43		13.281	6.295					
14		12.980	287 36 56	6.928		12.371					
				17.766	17.766	16.666	16.666				
										188.139	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(±)										
10											
14		18.265	17 15 01	17.623		5.415					
7		12.980	107 36 66		3.928	12.371					
8		18.525	197 11 43		17.677	5.671					
F		10.944	288 61 50	10.508		10.366					
13		2.060	288 68 29	0.664		1.960					
				21.605	21.605	17.787	17.787				
										238.757	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	面積		町地名番
				+	-	+	-		+	-	
	10										
12											
F		7.893	16 29 17	9.426		2.228					
8		10.964	108 41 50		0.508	10.366					
9		10.066	197 11 43		7.616		2.976				
12		10.827	259 28 01	0.638			10.198				
				10.124	12.124	13.174	12.174				
										108.536	

不二測量株式会社

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(12)										
12		20.122	16 29 17	2.757		2.689					
9		10.827	109 38 0			3.638	10.198				
10		20.203	187 11 43			2.887	2.759				
11		10.526	290 27 20	2.778			10.037				
				12.628	12.628	12.787	12.787				
										29.108	

換地面積計算用紙 (不正形用)

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(+)										
E1											
E2		1.619, 331	26 33	1.622			0.775				
11		16.691	16 29 17	16.005		4.737					
10		10.724	110 37 20		3.778	10.037					
D1		16.213	187 11 43		14.800		4.498				
D2		2.235	260 12 32		1.178		2.531				
E1		7.498	287 13 49	2.162			6.970				
					19.439	19.699	16.774	14.774			
										182.728	

不二測量株式会社