


街廓原子一覽表用紙 (No. 30-1BL)

略 図

計算面積 = 4795.710 坪  
 角切面積 = 4795.745  
 換地面積 = 409.935

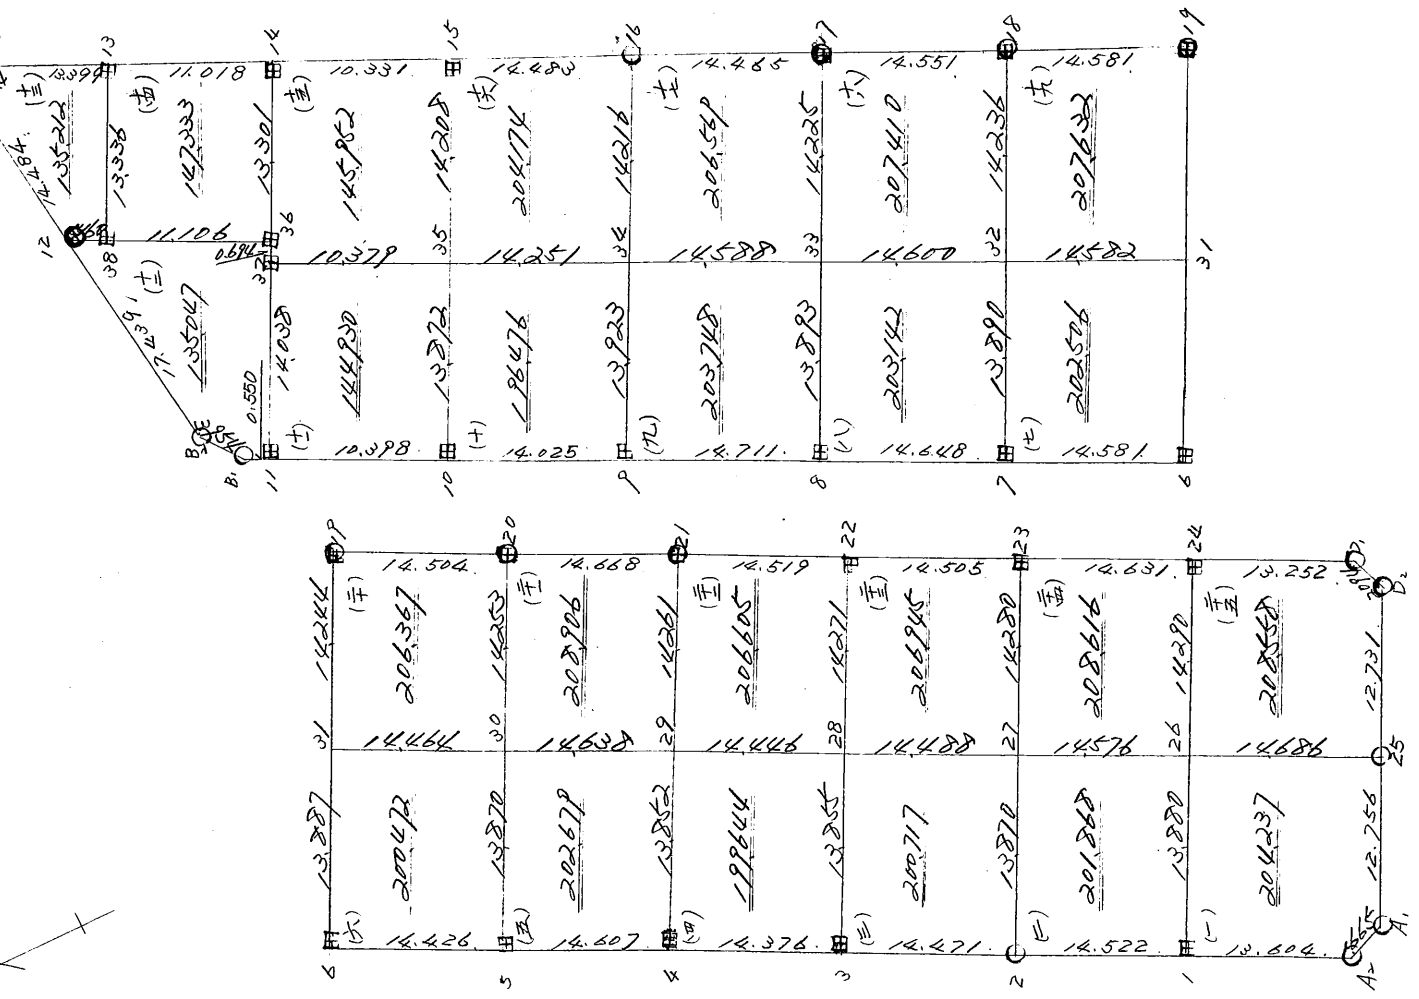

# 街角点座標及街区面積計算簿

街区番号 (No. 30 ~ / B6)

点	方向角(A)			距離(S)	Cos A		sin A		x	y	(3) 複緯距	(4) 複經距	(1) × (4)	(2) × (3)
					(1) S Cos A	(2) S sin A								
A1									5665.787	5391.123				
A2	229	36	53	1.665	+	1.436	-	0.242	5664.351	5392.025				
1	17	36	57	12.604	+	12.966	+	4.117	5651.325	5387.908				
2	17	12	52	14.522	+	13.872	+	4.298	5627.510	5383.610				
3	17	13	58	14.471	+	13.821	+	4.287	5623.692	5379.323				
4	17	11	14	14.376	+	13.734	+	4.248	5609.958	5375.075				
6	17	6	22	29.033	+	27.749	+	8.540	5582.209	5366.535				
8	17	9	37	29.229	+	27.928	+	8.624	5554.281	5357.911				
9	17	3	24	14.711	+	14.064	+	4.315	5540.217	5353.596				
B1	17	23	9	24.973	+	23.832	+	7.462	5516.385	5346.134				
B2	28	36	12	3.954	+	3.090	+	2.467	5510.285	5343.667				
12	65	57	41	17.429	+	7.104	+	15.927	5506.191	5327.740				
C1	65	55	10	14.424	+	5.910	+	13.224	5500.281	5314.516				
点検点座標計算												Σ		
												倍面積		
												面積		4795.710

不二測量株式会社

# 街角点座標及街区面積計算簿

街区番号 (No. 30~1BL)

12

点	方向角(A)	距離(S)	Cos A		sin A		X	Y	(3) 複緯距	(4) 複経距	(1) × (4)	(2) × (3)
			(1) SCos A	(2) Ssin A								
C2	119 42 6	2.624	- 1.300	+ 2.279	5501.581	5312.237						
D1	197 8 14	178.907	- 170.964	- 52.717	5672.545	5364.954						
D2	245 38 15	2.096	- 0.864	- 1.908	5673.409	5366.862						
A1	227 24 2	25.487	- 7.622	- 24.321	5665.787	5391.183						
点検点座標計算										Σ		
										倍面積		
										面積		

不二測量株式会社

換地面積計算用紙  
(不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(-)										
A1											
A2		1.665	329 36 53	1.436			0.842				
1		13.604	17 36 57	12.966		4.117					
26		13.880	107 33 9		4.186	13.234					
25		14.626	177 10 22		14.031		4.336				
A1		12.756	287 24 2	3.815			12.173				
				12.217	12.217	17.351	17.351			204.237	

不二測量株式会社

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(=)										
1											
2		14522	17 12 53	13872		4298					
27		13870	117 19 56		4132	13240					
26		14576	187 10 28		13926		4304				
1		13870	287 33 9	4186			13234				
				12058	12058	17538	17538			201.868	

換地面積計算用紙 (不正形用)

不二測量株式会社

30-1 BL

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(≡)										
2											
4		14.471	17 13 58	13.821		4.287					
28		13.855	107 15 38		4.111	13.231					
27		14.488	197 10 27		13.842		4.278				
2		13.870	287 19 56	4.132			13.240				
				17.953	17.953	17.518	17.518			200.717	

不二測量株式会社

30-1B6

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(127)										
W											
K		14.376	17 11 14	13.734		4.248					
29		13.852	106 58 11			4.063	13.249				
28		14.446	197 10 32			13.802		4.266			
W		13.855	287 15 38	4.111				13.231			
				17.848	17.845	17.487	17.487			199.644	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(五)										
4											
5		14.607	176 22	13.961		4.296					
30		13.870	106 50 37			4.019	13.275				
29		14.638	197 10 25			13.985		4.322			
4		13.862	286 58 11	4.063				13.249			
				18.004	18.004	17.571	17.571			202.679	

不二測量株式会社



30~150

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(文)										
5											
6		14.426	176 22	13.788		4.244					
31		13.887	106 41 20		3.988	13.502					
30		14.464	197 10 29		13.819		4.271				
5		13.870	286 50 37	4.019			13.275				
				17.807	17.807	17.546	17.546			200.472	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(七)										
6											
7		14.581	17 9 37	13.932		4.302					
32		13.790	106 41 8		3.928	13.305					
31		14.522	197 10 16		13.932	4.305					
6		13.287	226 41 20	3.928		13.302					
				17.920	17.920	17.607	17.607				202.506

不二測量株式会社

30-1BL

換地面積計算用紙  
(不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(1)										
7											
8		14648	17 9 37	13996		4322					
33		13893	106 53 W		4425	13291					
32		14600	197 10 26		13949	4311					
7		13890	226 41 2	3900		13305					
				17924	17924	17616	17616			203.142	

不二測量株式会社

30-1B6



換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(76)										
8											
9		14711	17 3 24	14064		4315					
24		13923	107 23 19		4161	13227					
23		14528	197 10 32		13938		4308				
8		13893	286 53 3	4035			13294				
				18099	18099	17602	17602			203.748	

不二測量株式会社

30~136

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(+)										
9											
10		14.125	17 23 9	13.284		4.191					
25		13.872	106 27 11		3.929	13.504					
34		14.251	197 10 25		13.816		4.208				
9		13.923	287 23 19	4.161			13.227				
				17.545	17.545	17.495	17.495			196.476	

不二測量株式会社

30~136

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(土)										
10											
11		10.598	17 23 9	9923		3107					
37		14.038	106 32 47		3998	13.457					
35		10.379	198 18 21		9854		3260				
10		13.872	286 27 11	3929			13.304				
				13.852	13.852	16.564	16.564			144.930	

不二測量株式会社

30~136



換地面積計算用紙  
(不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(E)										
11											
B1		0.550	17 23 9	0.525		0.164					
B2		3.954	32 36 12	3.090		2.467					
12		17.439	65 57 41	7.104		15.927					
38		4.460	195 35 39		4.296		1.199				
36		11.106	196 57 1		10.624		3.232				
37		0.694	226 59 59	0.203		0.664					
11		14.038	226 32 47	3.998		13.457					
				14.920	14.920	1.8558	1.8558			105.047	

不二測量株式会社

30~1B6

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(上)		' ' "								
38											
12		4460	15 35 39	4286		1199					
C1		14424	65 55 10	5910		13224					
C2		2624	119 42 6		1300	2279					
10		13399	197 2 14		12804		3948				
38		13334	286 59 41	3288			12754				
					14104	14104	16702	16702			135212

不二測量株式会社



30-136

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(南)										
36											
38		11.106	16 57 1	10.624		3.238					
13		13.336	106 59 41		3.898	12.754					
14		11.018	197 2 14		10.529		3.246				
36		13.301	286 36 48	3.803			12.746				
				14.627	14.627	15.992	15.992			147.033	

不二測量株式会社

30~136



換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(五)										
35											
37		10.379	18 18 21	9.854		3.260					
36		0.694	106 59 59		0.203	0.664					
14		13.301	106 36 48		3.803	12.746					
15		10.331	197 8 14		9.872		3.044				
35		14.208	286 27 10	4.024			13.626				
				13.878	13.878	16.670	16.670			145.952	

不二測量株式会社

30~136

換地  
面積  
計算  
用紙  
(不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(尖)										
24											
25		14251	17 10 25	13616		4208					
15		14208	106 27 10		4024	13626					
16		14423	177 8 14		13840		4268				
24		14216	287 23 14	4248			13566				
				17864	17864	17834	17834			204.174	

不二測量株式会社

30-1BL



角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(L)										
33											
34		14.588	17 19 32	13.938		4.308					
16		14.216	107 23 14		4.248	13.566					
17		14.465	197 8 14		13.722	4.262					
33		14.225	286 5 39	4.132		13.612					
				12.070	12.070	17.874	17.874			206.569	

換地面積計算用紙 (不正形用)

不二測量株式会社

30-136

換地  
面積  
計算  
用紙  
(不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	面積		町地名番
				+	-	+	-		+	-	
	(L)										
32											
33		14.600	17 10 26	13.949		4.311					
17		14.225	106 5 39		4.132	13.612					
18		14.551	197 8 14		13.905		4.287				
32		14.236	286 41 18	4.088			13.636				
				18.007	18.007	17.920	17.920			207.410	

不二測量株式会社

30~1B6

換地  
面積  
計算  
用紙  
(不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(元)										
31											
32		14.572	17 10 16	13.932		4.305					
18		14.236	106 41 18		4.078	13.636					
19		14.581	197 8 14		13.934		4.297				
31		14.244	286 41 13	4.090			13.644				
				18.022	18.022	17.941	17.941			207.642	

不二測量株式会社

30~136



換地面積計算用紙  
(不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(F)										
30											
31		14464	17 10 29	13819		4271					
19		14244	106 41 13		4090	13644					
20		14504	197 8 14		13860		4274				
30		14253	226 50 54	4131			13641				
				17950	17950	17915	17915			206.367	

不二測量株式会社

30~1B6

換地面积計算用紙  
(不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(E)										
29											
30		14.638	17 10 25	13.985		4.322					
20		14.253	106 50 54		4.131	13.641					
21		14.668	197 8 14		4.017		4.323				
29		14.261	286 58 21	4.163			13.640				
				13.148	13.148	17.963	17.963			208.906	

不二測量株式会社



30~1BL

換地  
面積  
計算  
用紙  
(不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	面積		町地名番
				+	-	+	-		+	-	
	(E)										
28											
29		14.446	17 10 32	13.802		4.266					
21		14.261	106 58 21		4.163	13.640					
22		14.519	197 8 14		13.876		4.278				
28		14.271	287 15 47	4.235			13.628				
				18.037	18.037	17.906	17.906			206.605	

不二  
測量  
株式  
会社

30~1B6

換地面積計算用紙  
(不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(E)										
27											
22		14488	17 10 27	12842		4278					
22		14271	107 15 47		4235	13628					
23		14505	197 8 14		13861	4274					
27		14280	287 19 52	4254		13632					
				18096	18096	17906	17906			206.945	

不二測量株式会社

30-136

換地  
面積  
計算  
用紙  
(不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(高)										
26											
27		14576	17 10 28	13926		4304					
23		14280	107 19 52		4254	13632					
24		14631	177 8 14		13922		4311				
26		14290	227 33 13	4310			13625				
				18236	18236	17936	17936				208.616

不二測量株式会社

30-1B△



換地  
面積  
計算  
用紙  
(不正形用)

角頂	夾角	辺長	方位角	緯距		經距		複經距	倍面積		町地名番
				+	-	+	-		+	-	
	(正)		° ' "								
25											
26		14.686	17 10 22	14.031		4.336					
24		14.290	107 33 13		4.310	13.625					
D <sub>1</sub>		13.252	197 8 14		12.664		3.905				
D <sub>2</sub>		2.094	245 38 15		0.864		1.908				
25		12.731	287 24 2	3.807			12.148				
				<del>17.838</del>	<del>17.838</del>	<del>17.961</del>	<del>17.961</del>			208.558	

不二測量株式会社