

街廓原子一覽表用紙 (No. 30-280)

略


図

坪

計算面積 = 39,600, 659,

替剪面積 = 3,325, 481,

換地面積 = 11,000, 122,

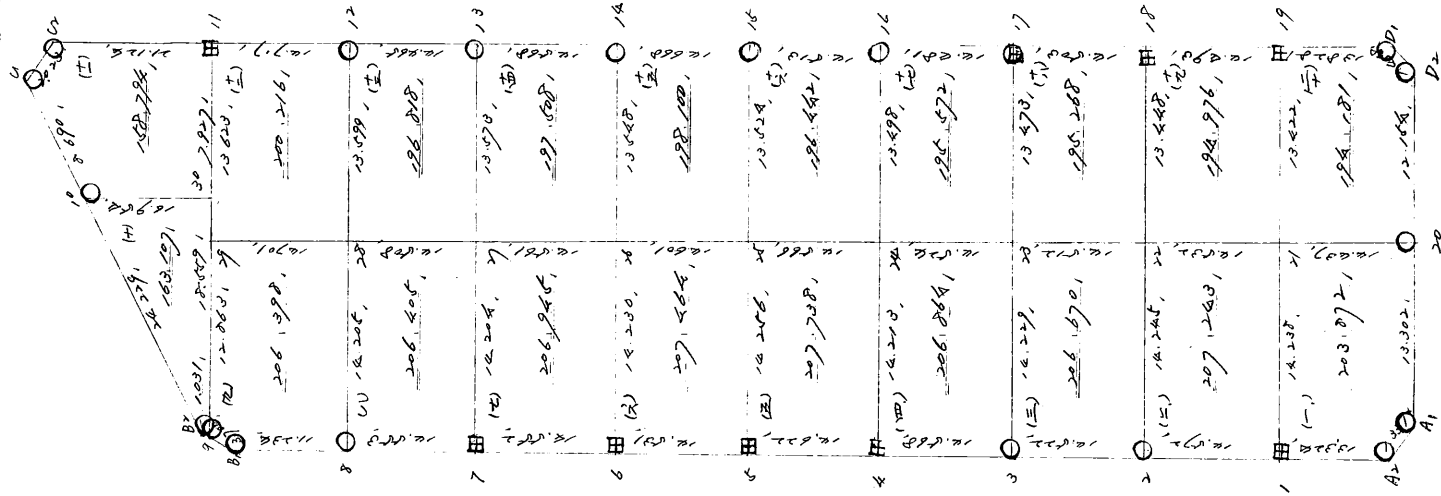

街角点座標及街区面積計算簿

街区番号 (No. 30-2BL)

点	方向角(A)	距離(S)	Cos A		sin A		x	y	(3) 複緯距	(4) 複経距	(1) × (4)	(2) × (3)
			(1) SCos A	(2) Ssin A								
A1							5656.140	5421.609				
A2	332 54 50	1.331	1.185	0.166	5654.948	5422.214						
2	17 6 00	27.296	26.662	8.207	5628.296	5404.028						
4	17 12 6	29.090	27.729	8.603	5609.507	5405.405						
5	16 58 39	14.622	13.984	4.269	5586.522	5401.136						
7	17 14 28	29.080	27.776	8.620	5558.726	5392.516						
B1	17 2 1	25.787	24.644	7.159	5534.103	5384.919						
B2	38 26 5	4.701	3.706	2.961	5530.397	5381.978						
10	65 57 10	24.229	9.570	22.126	5529.624	5359.852						
C1	66 2 36	8.690	3.153	7.939	5516.991	5351.914						
C2	157 41 38	2.020	1.572	0.768	5518.863	5351.144						
点検点座標計算										Σ		
										倍面積		
										面積		

不二測量株式会社

街角点座標及街区面積計算簿

街区番号 (No. 30-2BL)

点	方向角(A)	距離(S)	cos A	sin A	x	y	(3) 複緯距	(4) 複經距	(1) × (4)	(2) × (3)	
			(1) S cos A	(2) S sin A							
"	157° 0' 40"	21.124	20.220	6.180	6539.060	5057.025					
D1	157° 14' 19"	20.227	12.812	20.159	5660.450	5095.921					
D2	265° 46' 57"	1.458	21.358	1.423	5663.808	5397.234					
A1	227° 21' 26"	25.856	7.665	24.127							
点検点座標計算								Σ			
							倍面積				
							面積			3950.559	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(-)										
A1											
A2		1,331,332 64 50		1,125				2,606			
1		13,328,17 6 30		12,736			3,920				
21		14,238,106 51 15		4,120			13,626				
20		15,437,197 8 27		13,796			4,265				
A1		13,302,207 31 26		4,025			12,625				
				17,920	17,920	17,566	17,566				
										203,872	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(=)										
1											
2		14.572	27 6 00	13.928		4.287					
22		14.226	107 1 4			4.188	13.521				
21		14.532	197 8 10			13.187	4.202				
1		14.238	286 41 15	4.128			13.626				
				12.066	12.063	17.928	17.928				
											207.260

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(E)										
2											
3		14.522	17 12 6	13.872		4.295					
23		16.229	197 3 30		4.174	13.603					
22		14.512	197 8 29		13.867	6.277					
2		14.245	287 1 4	2.169		13.621					
				17.041	17.041	17.298	17.298				
										206.470	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	0										
3											
4		14.568	17 12 6	13.917		4.348					
24		14.213	107 14 16		4.212	13.575					
23		14.524	137 8 19		13.279	4.280					
3		14.229	337 3 30	4.174		13.604					
				12.291	12.291	17.220	17.220				
										206.864	

不二測量株式会社

換地面積計算用紙
(不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(5)										
4											
5		16.622	16 58 20	13.985		4.249					
25		18.256	107 27 45		2.278	13.499					
24		14.586	137 8 28		13.919	6.293					
4		18.213	287 14 16	4.212		13.475					
				18.197	18.197	17.268	17.268				
										207.738	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(2)										
5											
6		18.501	17 18 28	13.878		4.307					
26		18.239	197 10 66		4.203	13.595					
25		18.601	197 8 22		13.953	4.303					
5		18.256	287 27 65	4.278		13.599					
				18.156	18.156	17.902	17.902				
										207.584	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(E)										
6											
7		14.553	142°	10.798		4.313					
27		14.204	83°	8.187		10.570					
26		14.581	82°	10.915		4.291					
6		14.230	104°	8.203		10.590					
				12.101	12.101	17.086	17.086				
										206.945	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	0		0								
7	110										
8		14.553	17 2 1	13.908		2.200					
28		14.205	107 19 44			2.221	13.580				
27		14.528	197 8 14			13.264		2.275			
7		14.204	257 8 38	2.187				13.573			
				13.295	13.095	17.248	17.248				
										206.205	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	120										
8											
B1		11.239	17 21	10.735		3.399					
9		3.700	38 26 5	2.898		2.300					
29		12.863	107 15 26		3.816	12.204					
28		10.701	97 8 31		10.042	6.332					
8		10.205	227 19 44	6.231		10.560					
					17.864	17.864	17.890	17.890			
										206.398	

不二測量株式会社

換地面積計算用紙
(不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(7)										
9											
92		1.031	38 26 5	0.808		0.661					
10		20.229	65 57 10	7.870		22.126					
30		15.958	87 18 15		16.187		5.060				
9		12.559	287 15 20	15.506			17.724				
					16.187	16.187	22.767	22.767			
										163.107	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(正)										
28											
29		14.701	27 2 21	14.048		4.333					
11		10.628	107 15 03		4.052	10.010					
12		14.717	107 14 19		14.057	4.381					
28		10.599	227 19 49	4.051		12.922					
				12.099	12.099	17.343	17.343				
										200.216	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(正)										
27											
28		14.560	17 2 14	13.864		4.275					
12		13.599	107 19 49			4.051	12.982				
10		14.865	197 14 19			13.015		4.207			
27		13.570	287 2 53	4.022			12.970				
					7.866	7.866	7.257	7.257			
											196.818

不二測量株式会社

換地面積計算用紙
(不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(並)										
26											
27		14.561	17 2 22	13.914		4.291					
13		13.573	107 2 52		4.002	12.970					
A		14.580	127 16 19	13.914		4.317					
26		13.588	287 10 50	4.002		12.944					
				17.916	17.916	17.261	17.261				
										197.508	

不二測量株式会社

換地面積計算用紙
(不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(直)										
25											
26		14.601	17 5 22	10.958		8.203					
1A		10.568	107 10 50		8.022	12.965					
25		12.668	127 14 19		14.010	4.367					
25		10.524	207 27 58	4.059		12.900					
				10.012	10.012	17.297	12.127				
										198.100	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(°)		° ' "								
24											
25		14.466	27 28	12.919		4.290					
15		10.524	27 58		4.259	12.900					
16		14.413	27 14		13.261	4.301					
24		10.498	28 14	4.001		12.892					
					7.920	7.920	7.190	7.190			
											196.442

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	121										
20											
24		14.124	17 2 19	13.279		4.220					
16		13.481	107 12 30		4.221	12.992					
17		12.421	197 14 19		13.239		4.292				
23		10.473	207 3 28	13.952			12.220				
				17.231	17.241	17.172	17.172				
										196.672	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(大)										
22											
23		14.512	17 29	13.867		6.277					
17		13.670	107 28		0.952	12.880					
18		12.503	197 19		13.261	4.298					
22		10.858	227 18	0.936		12.259					
				17.800	17.800	17.157	17.157				
										195.268	

不二測量株式会社

換地面積計算用紙
(不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	° ' "		° ' "								
21	(空)										
22		14.532	17 0 10	12.257		6.282					
18		10.448	107 1 0			4.226	12.259				
19		18.894	197 18 19			12.222		6.290			
27		13.222	226 51 51			4.291		12.226			
						7.778	7.778	7.141	7.141		
										194.976	

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	(7)										
20											
21		10,637	17 2 27	10,794		4,255					
19		10,422	106 51 51		10,091	12,046					
21		13,027	197 14 19		13,207	4,098					
22		11,808	255 46 57		0,252	1,410					
20		12,154	287 31 26	5,660		11,490					
				17,256	17,256	17,101	17,101				
										94,181	

不二測量株式会社