


街 廓 原 子 一 覽 表 用 紙 (No. 55-1, B, L)

略

図

坪

計算面積 = 1575.833
 角切面積 = 1575.833
 換地面積 = 1110.011

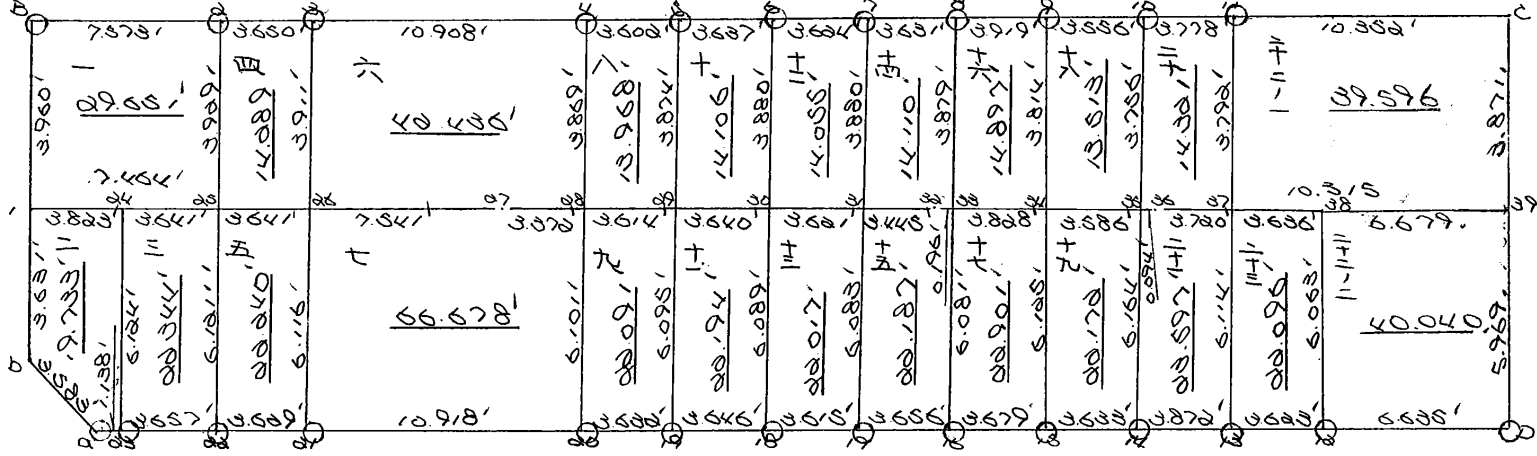

街角点座標及街区面積計算簿

街区番号 (No. 55-1B2)

点	方向角(A)	距離(S)	cos A	sin A	x	y	(3) 複緯距	(4) 複經距	(1) × (4)	(2) × (3)
			(1) S cos A	(2) S sin A						
A					0.893683	0.451				
B	345 48 59	3.583	3.474	0.878	0.890209	0.433				
B	50 34 40	7.591	6.570	3.803	0.883659	0.589				
2	121 52 52	7.573	4.000	6.431	0.887659	0.58				
3	121 56 38	3.650	1.931	3.097	0.889570	0.061				
4	121 53 36	10.908	5.763	9.261	0.895553	0.800				
5	121 36 27	3.602	1.888	3.068	0.897021	0.732				
6	121 35 16	3.637	1.905	3.098	0.899126	0.453				
7	121 41 25	3.624	1.904	3.084	0.901020	0.550				
8	121 38 45	3.631	1.905	3.091	0.902925	0.459				
9	121 56 3	3.919	2.073	3.326	0.905008	0.533				
10	121 53 52	3.556	1.879	3.019	0.906887	0.114				
11	121 48 41	3.778	1.991	3.211	0.908878	0.903				
点檢点座標計算								Σ		
								倍面積		
								面積		

不二測量株式会社

街角点座標及街区面積計算簿

街区番号 (No. 55-1B4) 12

点	方向角(A)	距離(S)	cos A	sin A	x	y	(3) 複緯距	(4) 複經距	(1) × (4)	(2) × (3)
			(1) S cos A	(2) S sin A						
C	1015741	10,350	5,480	8,783	29,4358	59990120				
D	020005	9,840	8,314	5,053	29,22570	59995383				
18	3013551	28,713	15,044	24,456	2967,608	700,9839				
A	3013529	25,620	13,945	22,575	2893,683	70042514				
点検点座標計算								Σ		
								倍面積		
								面積		575003

不二測量株式会社

換地面積計算用紙(不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	1										
1											
2		3,960.80	340	3,467		1,924					
3		2,525.61	5156		4,000	5,431					
4		3,960.80	8895		3,467		3,051				
5		2,454.30	5941	3,918			3,467				
										29,551	

不二測量株式会社

55-184

換地面積計算用紙(不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
a											
b		3,887.35	38°59'	3,574				0,878			
c		3,821.56	5°40'	3,443		1,880					
d		3,823.87	59°41'		2,002	3,215					
e		6,126.01	57°24'		5,206	3,266					
a		1,138.30	33°29'	0,906		0,660					
										19,738	

不二測量株式会社

SS-1BL

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	三							--			
23								--			
24		5104.3	47.1	5206		6965		--			
25		3541.6	49.4		1911	3100		--			
22		5121.2	68.2		5211	6211		--			
23		3557.8	55.2	1915		4115		--			
								--		26.344	
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			

不二測量株式会社

三

55-181

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	114							--			
2		3,929.3	58°25'	3,315.		2,061.		--			
3		4,550.4	56°58'		1,951.	4,092.		--			
4		3,910.1	57°34'		3,385.		2,090.	--			
5		3,541.0	59°41'		1,911.		4,092.	--			
											14,239

不二測量株式会社

11

55-132

五

換地面積計算用紙(不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	5										
25		5.2131	48.25	5.211		5.211					
26		3.5416	47.41		1.911	3.000					
21		5.15211	45.74		5.001		5.000				
22		3.52930	45.09		1.981		0.091				
											0.040

不二測量株式会社

55-1BL

六

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		經距		複經距	倍面積		町地名番
				+	-	+	-		+	-	
	六							--			
26								--			
3		3,911.31	45.74	3,228		2,229		--			
4		10,008.21	54.38		5,200	9,221		--			
28		3,869.01	50.7		3,091	2,473		--			
27		3,574.30	41.1	1,331		2,889		--			
26		7,841.30	59.41	3,969		5,418		--			
								--		402,406	/
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			

不二測量株式会社

55-132

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	7							--			
21								--			
25		5,153.31	45.34	5,000		327.9		--			
27		2,541.01	59.41		5,900	5,418		--			
28		3,375.01	41.1		1,371	2,889		--			
20		6,101.01	50.7		5,900		5,000	--			
21		10,918.50	55.09	5,270			9,100	--			
								--		56,508	
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			

不二測量株式会社

55-134

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	11							--			
28								--			
4		389.3	427	389.3		8.044		--			
5		350.1	3607		1888	3.038		--			
29		387.4	3146		4806	0.028		--			
28		351.4	4111	1888		3.038		--			
								--		13.968	
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			

不二測量株式会社

55-1BL

九

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	九										
20											
28		6101.31	40°27'	5,290		4,205					
29		6514.21	41°1'		1,208	5,025					
19		6095.21	51°45'		5,295		5,821				
20		6502.30	52°20'	1,205			5,021				
										22,091	

不二測量株式会社

55-1BL

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
								--			
29								--			
5		3874.31	31.45	3.804		2.026		--			
6		3537.61	55.15		1.905	3.098		--			
30		3380.01	28.51		3.809	2.026		--			
29		3540.30	41.1	1.912		3.098		--			
								--			14.106
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			

不二測量株式会社

SS-152

十二

換地面積計算用紙(不正形用)

角頂	夾角	辺長	方位角	緯距		經距		複經距	倍面積		町地名番
				+	-	+	-		+	-	
	111										
30											
6		5.880	31.08.31	4.307		0.025					
3		5.624	41.25		1.944	3.084					
31		5.880	31.08.31		4.307		0.025				
30		5.880	31.08.31	1.944		4.081					
										14.055	

不二測量株式会社

55-124

十三

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		經距		複經距	倍面積		町地名番
				+	-	+	-		+	-	
								--			
								--			
18								--			
30		6.08	31° 28' 31"	3.93		3.79		--			
31		5.51	121° 41' 11"		1.96	5.08		--			
17		6.08	32° 41' 48"		6.07	3.81		--			
18		5.51	30° 35' 31"	1.81		5.07		--			
								--		22.07	
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			

不二測量株式会社

SS-182

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		經距		複經距	倍面積		町地名番
				+	-	+	-		+	-	
								--			
	150							--			
31								--			
>		3.880	31 31 48	0.207		0.007		--			
8		3.553	31 30 48		1.007	0.007		--			
33		3.879	31 31 30		0.810	0.000		--			
32		0.953	31 31 31	0.101		0.158		--			
31		3.448	30 31 41	1.809		0.000		--			
								--		14.110	
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			

不二測量株式会社

1-1

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	15										
17											
31		6.033	31.3.48	5.25		3.81					
32		3.445	31.41.11		1.80	2.93					
33		0.26	33.57.31		0.40	0.158					
16		6.08	31.28.0		5.91	5.67					
17		3.55	31.55.51	1.95		5.14					
										22.87	

不二測量株式会社

55-1BL

十六

角頂	夾角	辺長	方位角	緯距		經距		複經距	倍面積		町地名番
				+	-	+	-		+	-	
	16							--			
33								--			
8		58.9	150.0	4.0		2.0		--			
9		52.0	155.4		2.2	4.0		--			
34		32.4	150.0		3.0	2.0		--			
33		52.8	150.0	1.8		4.0		--			
								--		14.897	
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			

換地面積計算用紙(不正形用)

不二測量株式会社

55-184

換地面積計算用紙(不正形用)

角頂	夾角		辺長	方位角	緯距		経距		複経距	倍面積		町地名番
	+	-			+	-	+	-				
		44							--			
16									--			
33			508.44	32.0			6,453		--			
34			508.00	57.54		1,900	508.00		--			
15			510.00	80.96		0,100	510.00		--			
16			507.80	145.17	1,908		510.00		--			
									--		20,901	
									--			
									--			
									--			
									--			
									--			
									--			
									--			
									--			

不二測量株式会社

十七

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	110°							--			
34								--			
9		32.45	135°	20.68		20.68		--			
10		35.55	101°		22.9	20.9		--			
35		32.65	109°		4.74	20.68		--			
34		32.55	107.5°	18.65		20.75		--			
								--			13.023
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			

不二測量株式会社

55-182 11

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	79							--			
10								--			
34		6.125.40	50.56	3.450		33.17		--			
35		6.125.40	57.31		1.845	30.75		--			
14		6.125.40	19.19		3.209		4.396	--			
15		6.125.40	30.51	1.904			3.094	--			
								--			82.172
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			

十九

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	110							--			
55								--			
10		3.78	19.2	3.78		0.008		--			
11		3.78	48.4		1.99	3.21		--			
37		3.78	45.45		3.06	1.99		--			
36		3.78	44.2		1.99	3.14		--			
55		0.92	57.3		0.48	0.08		--			
								--		14.38	
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			
								--			

不二測量株式会社

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		經距		複經距	倍面積		町地名番
				+	-	+	-		+	-	
	171°										
14											
35		6,154	31°19'12"	5,809		3,296					
36		0,971	80°57'31"		0,962	0,984					
37		3,700	89°24'31"		1,995	3,444					
13		5,140	41°16'45"		3,927		3,960				
14		3,821	50°05'31"	3,669			3,998				
										2,357	

不二測量株式会社

171

SS-1BL

1111

換地面積計算用紙 (不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	111										
102											
38		5.067	51.548	5.447		5.204					
37		5.505	40.040	1.948		5.070					
11		5.570	31.454	5.004		1.997					
C		10.756	41.574		5.480	8.283					
D		9.840	30.605		8.344	5.253					
102		5.500	30.051	5.475		5.651					
											29.537
											- 39.596
											40.041
											- 0.001
											40.040

不二測量株式会社

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
	57°										
37											
11		3.792	31°46'45"	3.224		1.997					
C		10.352	121°57'41"		5.480	8.783					
39		3.871	212°20'6"		3.271		2.071				
37		10.315	302°24'21"	5.527			8.709				
										39.596	

換地面積計算用紙 (不正形用)

不二測量株式会社

55-1BL

換地面積計算用紙(不正形用)

角頂	夾角	辺長	方位角	緯距		経距		複経距	倍面積		町地名番
				+	-	+	-		+	-	
13											
37		614.314545		5.02		3.20					
38		366.43241		1.98		3.07					
12		695.81548		5.47		3.24					
13		582.32554		3.98		3.88					
										22.026	

不二測量株式会社

1111